

Recess Mount (inside)

How to measure inside a reveal

Use this method if you would like your blinds to hang inside the reveal as shown.



1. Measure the drop in millimetres, making sure to take the measurements from the top of the reveal to the windowsill in three places, as shown in the diagram. *Please advise us of the smallest measurement as this is the one we will need to use.

2. Then measure the width of the reveal from wall to wall in three places as shown. *Please advise us of the smallest measurement, as this is what we will use.

***Note:** a reduction will be made to the measurements to ensure proper fit.


Note:

- The width of a roller blind is from outside of one bracket to the outside of the other, it is not the material width only as we do need some space for the working components and brackets. If you are face mounting a roller blind and need to know the difference between fabric widths and overall blind width, this is 30mm.

Face Mount (outside)

How to measure outside a reveal

If you want your blinds to hang outside the reveal, use the method below

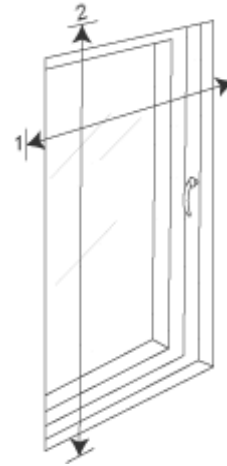

1. Measure the width of where you would like your blind to be in millimetres. (Note down your measurement)

2. Measure the drop in millimetres from where you want the top of your blind to be to the bottom. (Note down your measurement)

***Note:** The blind will be made to the exact measurements. No allowance will be made.